



LAX Movement Area Map 2023 v4

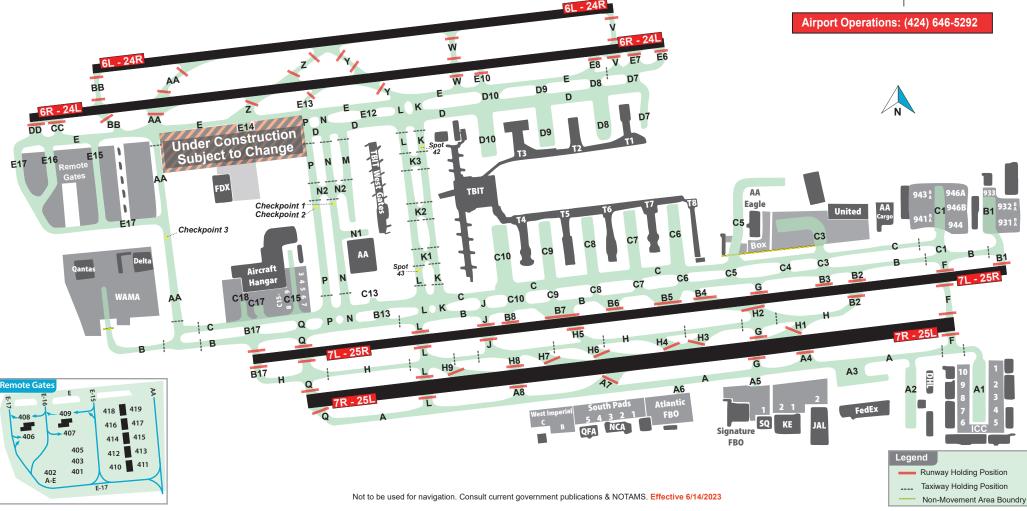

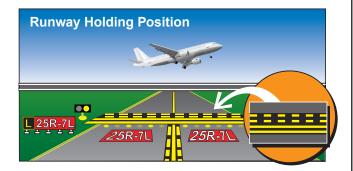

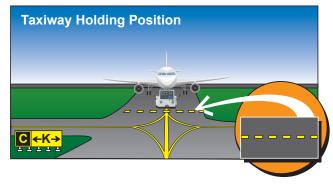

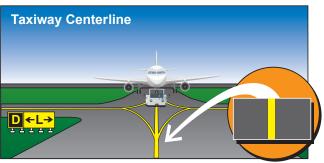



Airfield Signs



RUNWAY HOLDING POSITION SIGN

Denotes entrance to a Runway



TAXIWAY LOCATION SIGN

Identifies Taxiway on which vehicle/aircraft is located



TAXIWAY DIRECTION SIGN

Indicates general direction of an intersecting taxiway



DESTINATION SIGN

Indicates direction to departure runways

ATC NON VIS AREA

INFORMATION SIGN

Provides advisories of various types



TAXIWAY LOCATION SIGN Co-located with

TAXIWAY DIRECTION SIGN



TAXIWAY LOCATION SIGN Co-located with

RUNWAY HOLDING POSITION SIGN

FAA Air Traffic Control Frequencies

Automatic Terminal Information Service (ATIS) 133.80 Tower (South Complex) 120.95 Tower (North Complex) 133.90 Ground Control (South) 121.75 Ground Control (North) 121.65 Ground Control (Metering) 121.40

Ramp Tower Frequencies

-		
	LAWA (M Taxilane)	131.975
	LAWA (K & L Taxilane)	131.075
	American (C10 Taxilane)	129.325
	American (C9 Taxilane)	130.50
	Alaska (C8 Taxilane)	130.85
	United (C7 Taxilane)	129.40
	United (C6 Taxilane)	129.50
	Envoy / Eagle Box	129.475
	Delta (D9 Taxilane)	131.45
	Delta (D10 Taxilane)	131.85

LAX Taxi Routes

North Route

Taxi/proceed via Taxiway C or Taxiway B towards Taxiway N, taxi/proceed northbound on Taxiway N; at Checkpoint 1, contact Ground Control on frequency 121.65; hold short of Taxiway N2.

South Route

Taxi/proceed via Taxiway E or Taxiway D towards Taxiway P, taxi/proceed southbound on Taxiway P; at checkpoint 2, contact Ground Control on frequency 121.75; hold short of Taxiway C.

West Route

Taxi/proceed westbound on Taxiway C towards Taxiway AA, hold short of Taxiway AA; contact Ground Control on frequency 121.65 when number one approaching Taxiway AA.

Bridge Route

Taxi/proceed towards Taxiway AA, taxi southbound on Taxiway AA, at checkpoint 3, contact Ground Control on frequency 121.75; hold short of Taxiway Charlie (C).